


OP-6515H Intercom

USER MANUAL

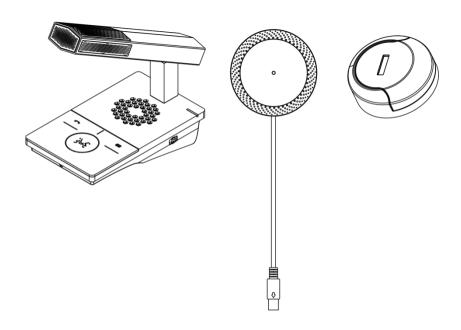

Contents

MANUFACTURER'S REFERENCE1			
LEGAL STATEMENT 1			
DISCLAIMER 1			
PRIVACY PROTECTION REMINDER			
COPYRIGHT STATEMENT			
ABOUT THIS MANUAL			
IMPORTANT SAFETY PRECAUTION			
During Installation			
DURING USE1			
1. PRODUCT INTRODUCTION			
1. PRODUCT FEATURES			
2. PRODUCT SPECIFICATION			
3. PRODUCT INTERFACES			
4. PRODUCT DIMENSION (UNIT: MM)			
5. INSTALLATION DIAGRAM			
6. PRODUCT PACKING LIST			
2. PRODUCT CONFIGURATION			
1. Basic network settings9			
2. Web Page Parameter Configuration			
3. BASIC FUNCTIONS			
1. LOCAL INTERCOM			
2. WARM PROMPT21			

3.	REMOTE INTERCOM	1	
4.	RECEIVING BROADCASTS	<u>1</u>	
5.	RECORDING)	
6.	. ENGINEERING MODE - VOLUME ADJUSTMENT WITHOUT WEB ACCESS		
4. <u>TR</u>	OUBLESHOOTING	<u>23</u>	
1.	WHY CAN'T THE TERMINAL TALK TO OTHERS?	3	
2.	WHY IS THE TERMINAL "OFFLINE"?	<u>:3</u>	
2	WFB PAGE IS BEHAVING ABNORMALLY?	2	

Legal Statement

Disclaimer

Please read this user manual carefully before using this product and follow all instructions and suggestions mentioned therein, our company is not responsible for any damages caused by misuse of this product due to violation of this manual.

To the extent permitted by applicable law, under no circumstances will the company compensate for any special, incidental, indirect, or consequential damages arising from the relevant content and the products described in this document, nor for any loss of profits, data, goodwill, document loss or expected savings.

The products described in this document are provided "as is". Unless required by applicable law, the company does not provide any express or implied warranty for all contents in the document, including but not limited to merchantability, quality satisfaction, fitness for a particular purpose, non-infringement of third-party rights, etc.

If you connect the product to the Internet, you will bear your own risks, including but not limited to the possibility that the product may be attacked by network, hacker, virus infection, etc. The company is not responsible for the abnormal operation of the product, information leakage and other problems caused by this, but we will provide you with product-related technical support in a timely manner. When using this product, please strictly abide by applicable laws. If this product is used to infringe the rights of a third party or for other improper purposes, The company shall not bear any responsibility.

If the content of this manual conflicts with applicable laws, the legal provisions shall prevail.

Privacy protection reminder

When you install our products, you may collect personal information such as face and fingerprints. When using the products, you need to comply with the privacy protection laws and regulations of your region or country to protect the legitimate rights and interests of others. For example, provide clear and visible signs to inform relevant rights holders of the existence of video surveillance areas and provide corresponding contact information.

Copyright Statement

The copyright of this guide belongs to our company, all rights are reserved.

Without the written permission of our company, any extract, reproduction, retransmission, modification of any content in this document in any way is illegal and prohibited strictly.

When this document is disseminated on the Internet media, our company allows downloading or printing for private use.

About this manual

This manual is only used as a guide for related products and may differ from the actual product, please refer to the actual product.

The information in this guide is subject to modification without prior notice.

This manual is only used as a guide, and the statements made do not constitute any form of warranty. The user shall bear full responsibility for the application of the product, our company does not assume any responsibility for any indirect or incidental losses caused by the incorrect use of this guide.

Important Safety Precaution

Please read this User Manual carefully before using this product and follow all the safety precautions mentioned herein

During Installation

Avoid humidity:

Please do not expose the device to rainy environment or other humid environment, otherwise it may lead to fire or electric shock

Use correct power supply:

Please use the specified power adapter for the device, using high voltage power supply may lead to fire or electric shock.

Protect the electric wire:

Do not scratch, cut or twist the power cord, keep the power cord away from any heating device, do not place heavy objects on top of the power cord, otherwise it may lead to fire or electric shock.

During Use

If anything goes wrong:

During use of this device, if any of these anomalies mentioned below happens, please cut off the electricity immediately, otherwise it may lead to fire or electric shock.

- smoke or strange smell coming out of the device.
- water or other foreign object gets into the device.
- damage on the product shell.
- damage of the power cord (cable core exposed or broken).
- malfunction of the device (no network connection or no sound).

Do not open the product shell:

There are high voltage parts inside of the product shell, opening the product shell without permission may lead to fire or electric shock.

Do not touch the device when it thunders:

To avoid electric shock, please do not touch the device or power plugs when it thunders.

Do not place liquid containers on top of the device:

If accidentally knock over the liquid container and let any liquid get into the device, it may lead to fire or electric shock.

Cautions when the device is not in use

If the device is not in use for 10 days or longer, please cut off the electricity and unplug the power plug from the power socket, otherwise it may lead to fire or electric shock.

1. Product Introduction

The Digital Window Intercom is embedded with IP Audio digital network audio technology which has intellectual property rights our company realizes digital full-duplex intercom. The set is made of an internal window intercom module, external window intercom module, and wireless charger, equipped with power input, analog audio output interface etc.

1. Product Features


- Adopt single DSP multi-channel language auto-control technology, avoiding feedback and disturbances to realize real digital full-duplex intercom.
- Using touch keys with an ergonomic design, avoiding key-click sounds in the intercom conversation, and use light indicators.
- Recognizing sound source, control environment noise, automatically adjust volume and restore the original sound.
- Providing three mode-scenes (quiet, standard, noisy), support one-button adjustment.
- Professional metal structure design, adopting hard metal housing to prevent resonance, purify and naturalize the sound to make it transparent.
- Personalized and customized service message playback: "Hello, welcome", "Thank you. See you next time"
- Support for remote supervisor intercom, one-button call to the terminal specified by the server.
- Accessible via a Ethernet port and LAN network

1.2. Product Specification

Product Specification		
Power,Power Consumption	DC12V/1.5A, ≤5W	
Functional Parts Interface	Power Interface, Analog audio output interface, Network interface, PS/2 interface	
SNR(Signal to Noise Ratio)	>90dB	
Frequency Response	20Hz∼16KHz	
Audio Samples	8KHz~32KHz	
Network Communication Protocol	TCP/IP、UDP、ARP、ICMP、IGMP、FTP	
Audio Coding	PCM/AAC	
Operating Temperature, Operating Humidity.	-10℃∼55℃, ≤90%RH(non condensing)	
Dimension	Internal window intercom:95x160x41.9mm, External window intercom: φ88x30.2mm, Wireless Charger: φ90x14.2mm	

1.3. Product Interfaces

Internal window intercom Module

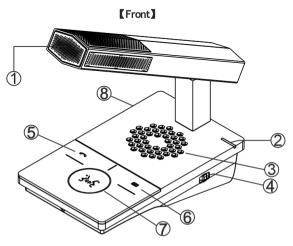

①Microphone Pole: Collect local intercom audio.

- 2) Status light: red light is offline, green light is online.
- 3 Speaker: Amplify local intercom audio.
- 4) Scene mode adjustment switch:

3 scene modes are available:

- 1. noisy (to the front)
- 2. standard (in the middle)
- 3. quiet (to the back)


Standard is the default mode.

⑤Voice broadcast button/ remote intercom button (left):

Voice Broadcast: When you are talking to the External window intercom module, press this button will automatically play voice prompt, press it for once will platy the voice prompt: "Hello, welcome to visit", and press and long hold the button will play another voice prompt: "Thank you, welcome to visit the next time"

Remote Intercom: When the terminal is connected to the server, you can press this button to call the specified terminal on the server or answer calls from other terminals.


- ⑥Remote intercom button(right)
- ①Intercom button: Press this button to talk with the External window intercom module, press it again to end the talk. the intercom button is steady blue during the intercom process.

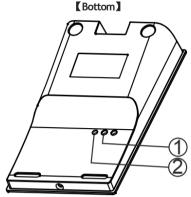

- ①System update button: Used for update.
- ②Bluetooth frequency matching button and indicator light: Press and hold the Bluetooth frequency matching button of the internal window intercom module and the external window intercom module


at the same time, the indicator light is steady on, it means the frequency is matched. If the indicator light is flashing, it meas frequency matching is failed.



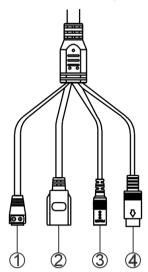

- ①Analog audio output interface: Output analog audio, it can be connected to a DVR, or DCL20 amplifier
- ②Network Interface: Insert network cable connect to switch.
- ③Power interface: Connect to DC12V/1.5A power adapter.
- (4) Wireless Charger interface: Connect to wireless charger.

External window intercom module

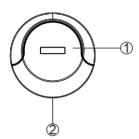


①Speaker/MIC

Speaker: Amplify local intercom audio.

MIC: Pick up local intercom sounds.

2) Bluetooth frequency matching button.


Wireless Charger

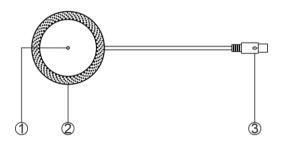


- ①Power Light
- ②External window intercom module wireless power charging: 5mm < Charging distance < 15mm.
- ③Wireless charger interface: Connect to the Internal window intercom module.


1.4. Product Dimension (unit: mm)

Internal window intercom module

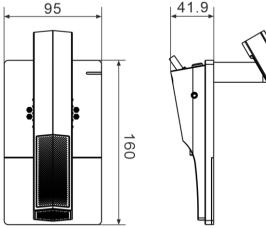


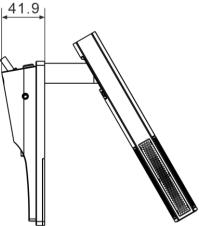


External window intercom module

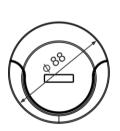




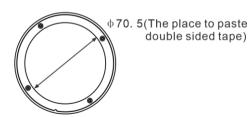


Wireless Charger

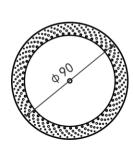



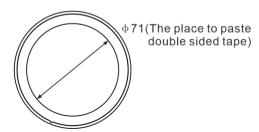

1.5. Installation Diagram

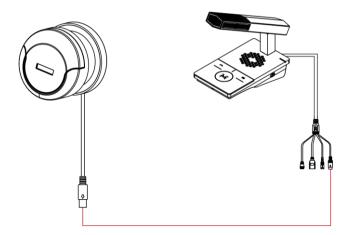

Installation Instruction:

- (1) Attach circular double sided tape to the bottom of the external window intercom module and attach it to the outside of the window glass, with the outer side of the net cover facing upward;
- (2) The bottom of the wireless charger should be attached with the circular double sided tape, and the tail line should face down, align the external window intercom module and stick it on the inside of the window glass.
- (3) Connect the wireless charger to the tail cable of the internal window intercom on the desk

1.6. Product Packing List

