Mounting instruction

Ecoflex® 10, Aircom® Premium

BNC socket / Item no.: 7386

www.ssb-electronic.com

Required tools:	
1 x	cutter knife
1 x	scissors
1 x	open-ended spanner 17 mm
1 x	open-ended spanner 18 mm
1 x	soldering station + solder

1



Cut off cable tail right-angled. Move the nut, clamping ring and rubber washer over the cable tail.

2



Remove 5 mm of the outer jacket with the cutter knife.

3




Bend copper braid upwards right-angled. Insert contact sleeve between copper foil and braid until stop. Cut off protruding braid. Move the rubber seal to the front, up to the contact sleeve.

4




Mark out and remove the copper foil and the dielectric with a cutter knife.

5

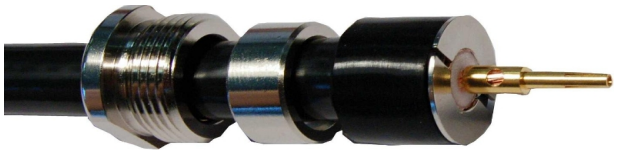


Attach inner pin to the inner conductor and solder carefully. Hint:
Pin 1: 2,8 mm Ø Aircom Premium
Pin 2: 3,0 mm Ø Ecoflex 10.

6

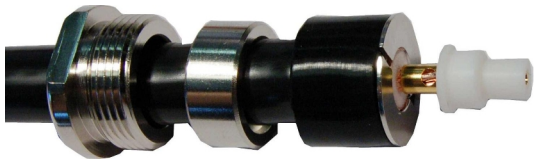

Then put on the Teflon insulator. The prepared cable tail has to be inserted into the housing until stop.

7

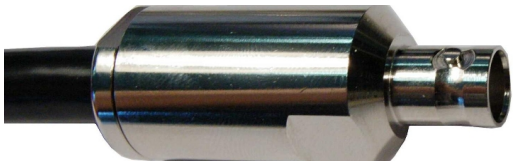

Tighten the clamping nut finger tight with two open-ended spanners 17/18 mm. A gap of 1 to 1,5 mm must still be visible between the nut and the connector housing!

Right of technical modification is reserved

SSB- Electronic GmbH · Am Pulverhäuschen 4 · 59557 Lippstadt · Germany